

Power Spring Counterbalance Assembly Replacement Instructions

These instructions are for the removal and replacement of the Power Spring Counterbalance Assembly for a Qmotion roller shade. These instructions do not apply to a Torsion Spring Counterbalance Assembly.

Read and understand all instructions before you begin.

Always wear personal protection equipment, including safety glasses and gloves.




(Step 1) Cut the two safety sticker tabs on the motor end label.



(Step 2a) Pull the Power Spring Counterbalance Assembly out. If the assembly doesn't come out easily, then it may be necessary to push it out.



(Step 2b) To push the spring assembly out, remove the motor assembly from the other end. Use a long object (such as the bottom bar) to force the spring out.

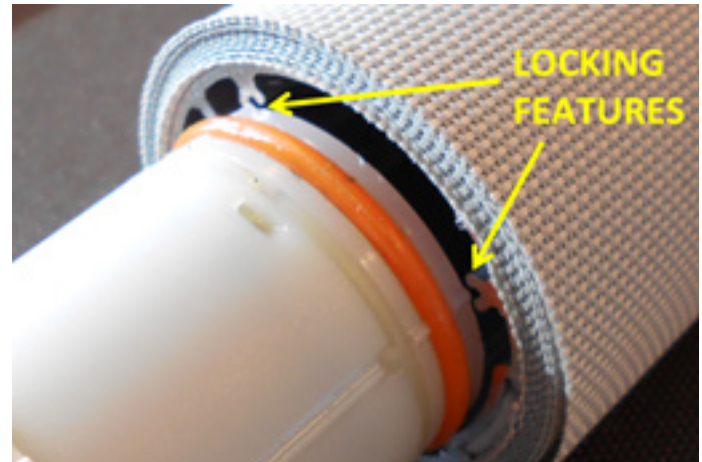

(Step 3) Insert the new Power Spring Counterbalance Assembly. Be sure the locking features on the assembly slide into the locking features on the tube.

Reinstall the shade per the Qmotion roller shade installation instructions. You may here clicking sounds the first time the shade goes up. This is normal. If the shade has difficulty maintaining its position at the top you may need to prewind the spring. See the Prewinding Installation Instructions.